



Residential



Commercial



Roadway / Transportation



STRUCTURAL WALL

KEYSTONE
COMPAC[®]

Manufactured By:



amcon
CONCRETE PRODUCTS, LLC

amconconcreteproducts.com

Plant: 507-451-7278



Keystone Retaining Wall Systems LLC
A Contech Company
4444 West 78th Street • Minneapolis, MN 55435
(952) 897-1040 • www.keystonewalls.com



We reserve the right to improve our products and make changes in the specifications and design without notice. The information contained herein has been compiled by KEYSTONE and to the best of our knowledge, accurately represents the KEYSTONE product use in the applications which are illustrated. Final determination of the suitability for the use contemplated and its manner of use are the sole responsibility of the user.



KEYSTONE COMPAC®

An industry favorite, Keystone Compac combines unrivaled aesthetics with proven wall performance.

EASE OF INSTALLATION

- Unit shape allows for tight radius curves and vertical core alignment.
- Shorter tail design, makes for easier handling in the field.
- Triangular shaped pin receiving hole allows for installer friendly construction adjustments.

AESTHETICS

- Variety of colors complement any landscape.
- Enhances the visual appeal of any project.

MAXIMUM VERSATILITY AND PERFORMANCE

- Near vertical or battered setback construction options.
- Higher unit-to-unit shear resistance.
- Increases vertical drainage through face units.
- Open cores allow for gravel interlock across block interfaces.
- Improves connection strength between face units and geogrid.
- Allows for various positive connections with reinforcement to build walls in excess of 60 feet tall with proper engineering.



Tri-plane



Straight Split

Unit Dimensions:
8" h x 18" w x 12" d

Unit Weights:
Tri-plane: 89 lbs
Straight Split: 92 lbs

Units/sq.ft.: 1


Pin Specifications:
½" x 5¼" Fiberglass Alignment Pins



Installation Instructions


1. Prepare the Base Leveling Pad.

Excavate the base trench to the designed width and depth. Start the leveling pad at the lowest elevation along the wall alignment. Step up in 8" (200mm) increments with the base as required at elevation change in the foundation. Level the prepared base with maximum lifts of 6" (150mm) of well-compacted granular fill (gravel, road base, or ½" to ¾" [10 - 20mm] crushed stone). Compact to 95% Standard Proctor or greater. Do not use PEA GRAVEL or SAND for leveling pad.

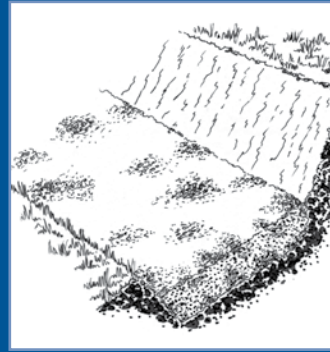


2. Install the Base Course.

Place the first course of Keystone units end to end (with face of wall corners touching) on the prepared base. The receiving pin holes should face upward, as shown. Make sure each unit is level. Leveling the first course is critical for accurate and acceptable results. Keystone recommends minimum embedment depth for below grade placement of Keystone units on a ratio of 1" (25mm) below grade for each 8" (200mm) of wall height above grade or one unit, whichever is greater.

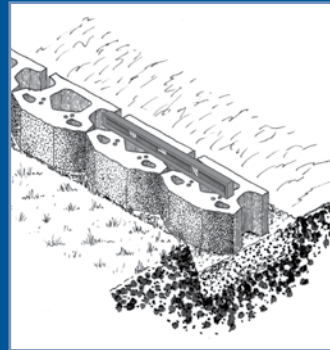


3. Insert the Fiberglass Pins.

Place the straight fiberglass pins into the holes of each Keystone unit as required. Once placed, the pins create an automatic setback for the additional courses. Place pins in the front holes for ⅛" (3mm) near vertical setback and the rear holes for 1⅛" (29mm) setback per course.

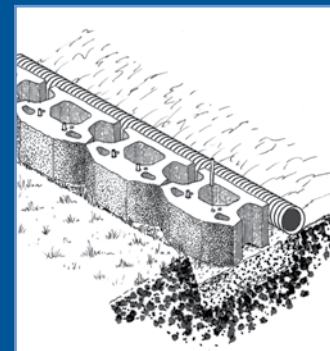


4. Install Fill & Compaction.

Provide ½" - ¾" (10 - 20mm) clean crushed stone drainage fill behind the tail of one foot (300mm). Fill all open spaces between units and open cavities/cores with the same drainage material. Proceed to place backfill in maximum 6 - 8" (150 - 200mm) layers and compact to 95% Standard Proctor with the appropriate compaction equipment.

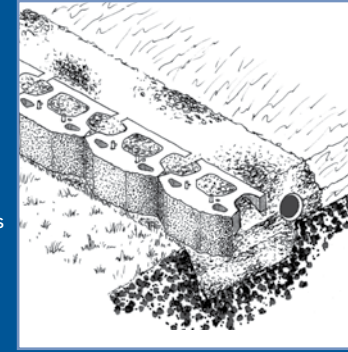

5. Install Following Courses.

Place the next course of Keystone units over the fiberglass pins, fitting the pins into the triangular shaped receiving hole in the units above. Push the units toward the face of the wall until they make full contact with the pins. Continue backfilling and building to desired top elevation.

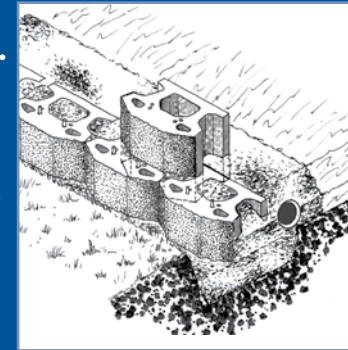

6. Capping.

Complete your wall with the appropriate Keystone capping units. With units dry and clean, use exterior construction grade adhesive on the top surface of the last course before applying cap units. Backfill and compact to finish grade.

